

1. Install the CURVA COMBO according to the installation instructions.








2. When AC power is supplied to the unit, the unit will automatically initiate a self-test with self-diagnostics as follows:

- (1) Monitors status of battery connection, charger board, lamps and transformer every 5 seconds.
- (2) Performs a one-minute self-test every month.
- (3) Performs a 30-minute self-test on the 6th month after installation.
- (4) Performs a 90-minute self-test on the 12th month after installation.

Note: ALL functions are factory pre-set (does not need field adjustment).

3. Dual color LED lamp indicator shows the following status:

- (1) Green color: ON/ Ready
Blinking: Testing
- (2) Red color: Service Alert
Blinking: Sequence below determines service required

	One blink ON/pause (4 seconds)	Battery is not connected
	Two blinks ON/pause (4 seconds)	Battery is shorted or battery voltage drops below acceptable level
	Three blinks ON/pause (4 seconds)	Charger board circuit fault
	Four blinks ON/pause (4 seconds)	Transfer circuit fault
	Five blinks ON/pause (4 seconds)	Emergency lamp fault
	Six blinks ON/pause (4 seconds)	Remote head's emergency lamp fault (if fixture has remote capability)
	Seven blinks ON/pause (4 seconds)	Exit LED strip fault

TO RESET:








After resolving the fault of emergency equipment, press test button for 2 seconds without releasing to reset. LED indicator will show green.

4. For manual test, press test button as follows:

Press test button once	(within 2 seconds)	30-minute test
Press test button twice	(within 2 seconds)	3-minute test
Press test button 3 times	(within 2 seconds)	30-minute test
Press test button 4 times	(within 2 seconds)	90-minute test

INSTRUCTIONS

- 1. Install the Exit Sign & Emergency Lighting Combo according to the installation instruction sheet.**
- 2. When AC power is supplied to fixture, the unit will automatically initiate a self-test and self-diagnostic test as follows:**
 - (1) Verifies battery disconnection, charger board failure, lamps failure and transformer failure at every 5 seconds.
 - (2) One-minute self-testing every month.
 - (3) 30 minutes self-testing on the 6th month of the year after installation.
 - (4) 90 minutes self-testing on the 12th month of the year after installation.
 - (5) Factory pre-set all functions (does not need field adjustment).
- 3. Dual color LED lamp indicator shows the following status:**
 - (1) Green color: ON/ Ready
Blinking: Testing
 - (2) Red color (Service Alert)
 - (3) Service Alert LED Code (Red color LED lamp indicator)

	One blink ON/pause (4 seconds)	Battery is not connected
	Two blinks ON/pause (4 seconds)	Battery is shorted or battery voltage drops below acceptable level
	Three blinks ON/pause (4 seconds)	Charger board circuit fault
	Four blinks ON/pause (4 seconds)	Transfer circuit fault
	Five blinks ON/pause (4 seconds)	Emergency lamp fault
	Six blinks ON/pause (4 seconds)	Remote head's emergency lamp fault (if fixture has remote capability)
	Seven blinks ON/pause (4 seconds)	Exit LED strip fault (for Exit Signs only)

CAUTION:

After solving the fault of emergency equipment, please press test button for 2 seconds without releasing to reset. LED indicator will show green.

- 4. For manual test, press test button as follows:**

Press test button once (within 2 seconds)	30-minute test
Press test button twice (within 2 seconds)	3-minute test
Press test button 3 times (within 2 seconds)	30-minute test
Press test button 4 times (within 2 seconds)	90-minute test